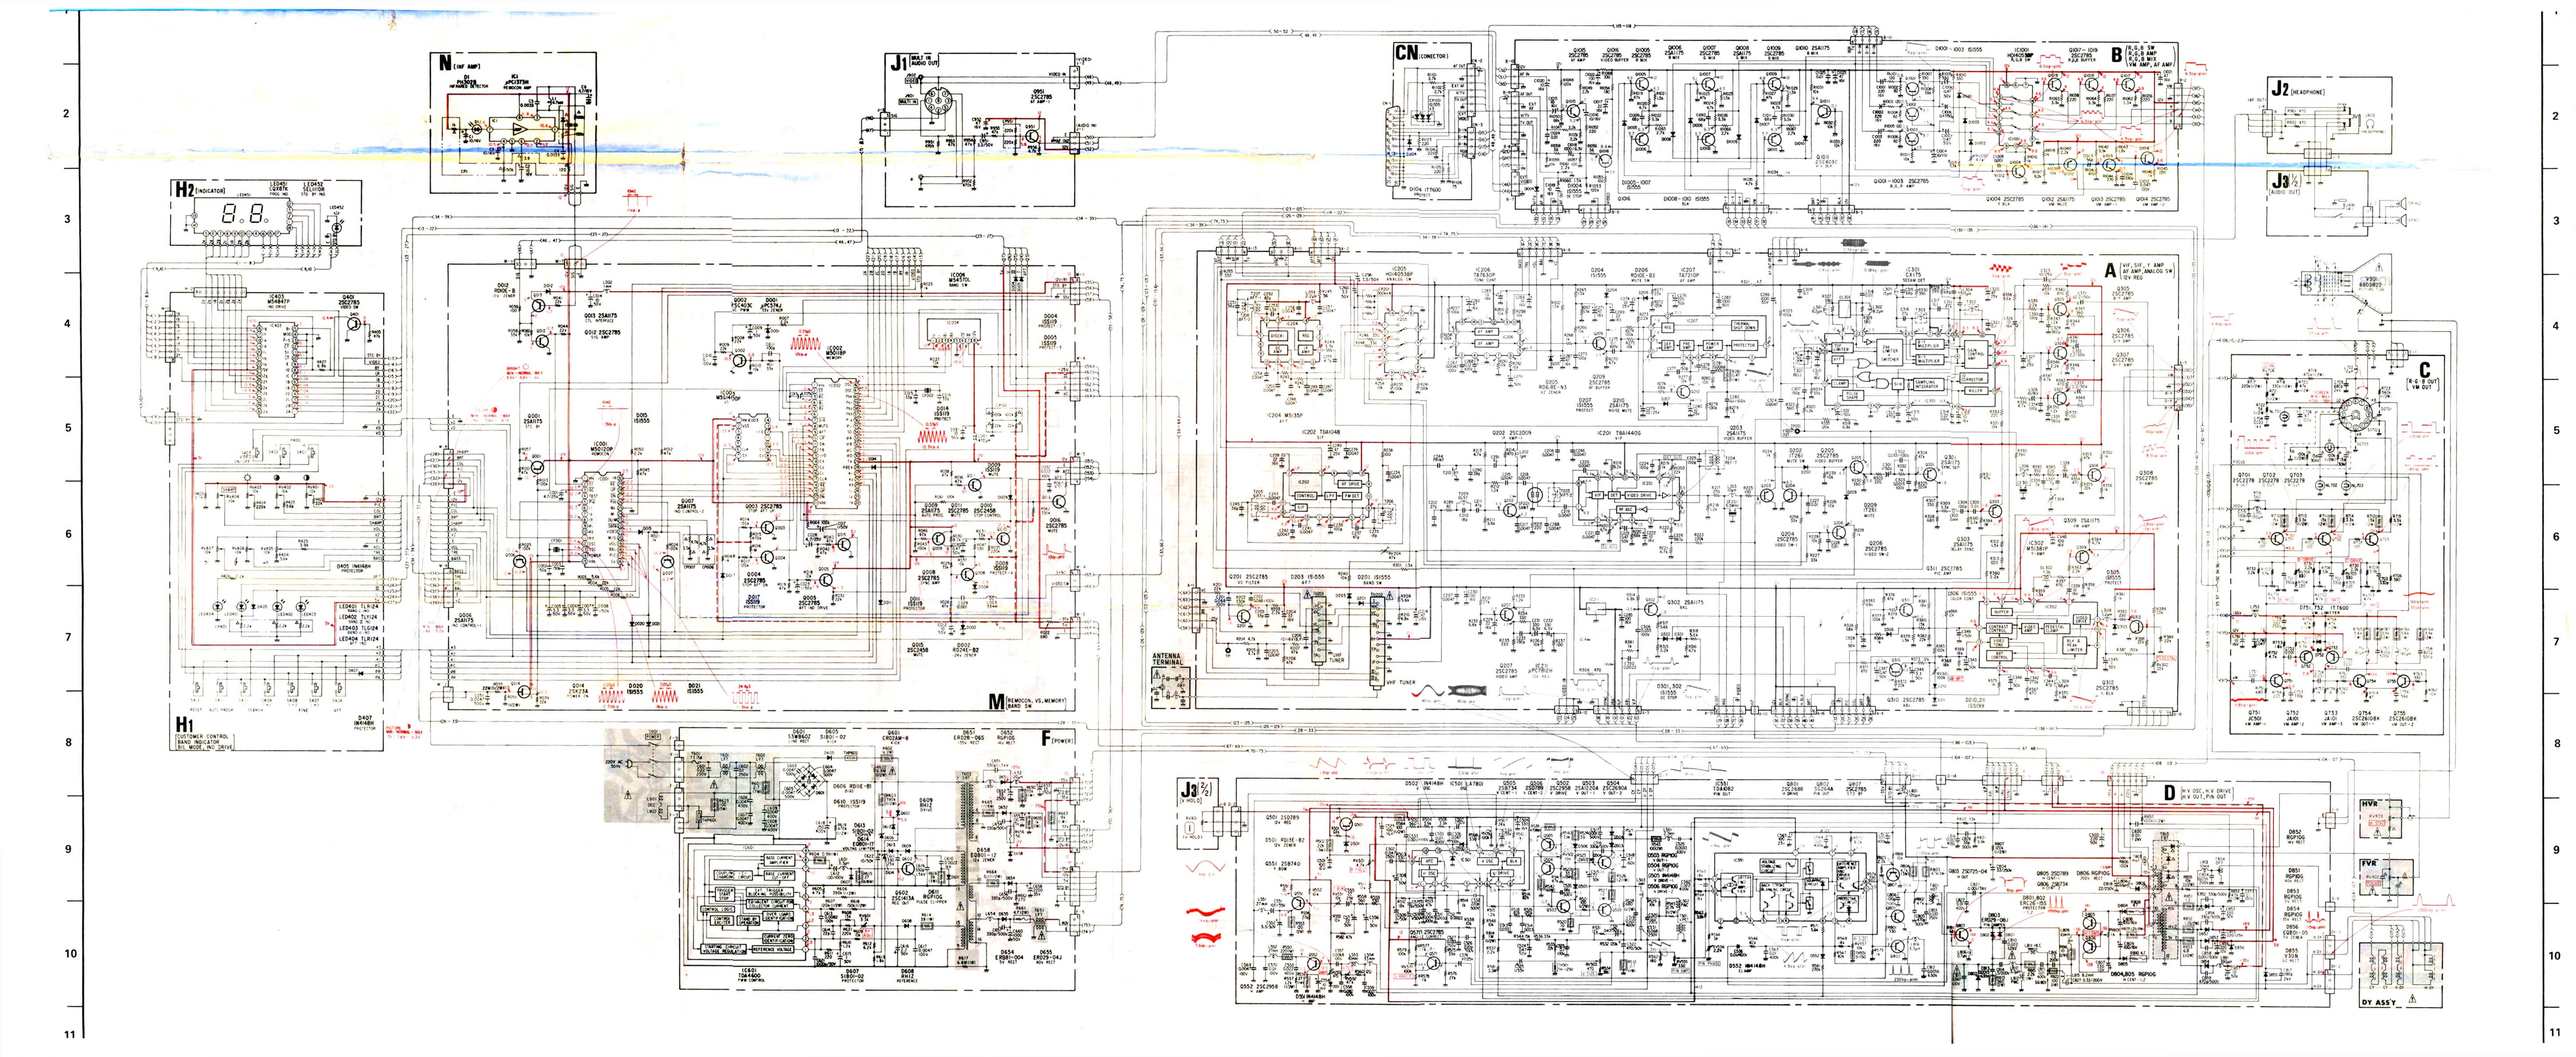
H2 (INDICATOR)
H1 (CUSTOMER CONTROL, BAND INDICATOR, SEL MODE / ADJ DRIVE)
N (INF AMP)
J1 (MAIN / SUB AUDIO OUT)
CN (CONECTOR)
B (R, G, B SW, R, G, B AMP, R, G, B MIX, VM AMP, AF AMP)
J2 (HEADPHONE)
J3 1/2 (AUDIO OUT)
A (VIF, SIF, Y AMP, AF AMP, ANALOG SW, SV REG)
C (R-G-B OUT, VM OUT)
M (REMOCON, VS, MEMORY, BAND SW)
F (POWER)
J3 2/2 (VOL)
D (H.V OSC, H.V DRIVE, H.V OUT, PIN OUT)
ANTENNA TERMINAL
VHF TUNER
HVR
FVR
DY ASSY